

63-5017.fm Page 1 Wednesday, June 13, 2001 7:18 AM



**RadioShack**<sup>®</sup>

[www.radioshack.com<sup>sm</sup>](http://www.radioshack.com)

## Multifunction LCD Stopwatch

Owner's Manual  
Please read before using this equipment.

R

## Features

Your RadioShack Multifunction Stopwatch is much more than an ordinary timer. It is an exceptionally versatile instrument that performs many different functions.

**Caution:** The stopwatch is water resistant to a depth of about 164 feet (50 meters), but it is not waterproof.

The supplied nylon cord lets you wear the stopwatch around your neck. Press the button on the clasp and slide it up or down to adjust the cord to the desired length. Press the tabs on the cord's connector to remove the cord from the watch.


© 2001 RadioShack Corporation. All Rights Reserved.  
RadioShack and RadioShack.com are trademarks  
used by RadioShack Corporation.

**MODE** — press to view  
the time, set an alarm,  
or run the stopwatch.

**LAP/RESET** —  
press to confirm a  
selection, reset the  
timer, or split the  
timer.

**START/STOP** —  
press to run the  
timer.

**LIGHT** — press to turn on the backlight  
for about 3 seconds.

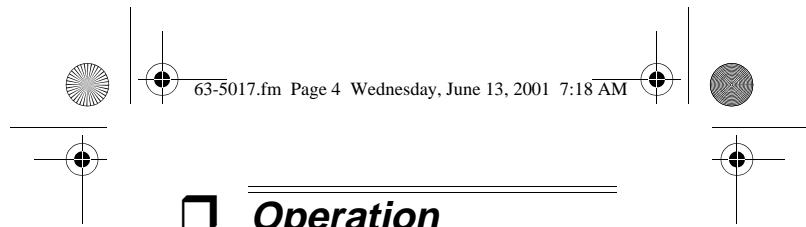



## *Operation*

### SETTING THE TIME/DATE

**Note:** If you do not press a button for 30 seconds, the stopwatch exits setup and stores the new settings.

1. Repeatedly press **MODE** until **TIME**, then the time display appears.
2. Hold down **LAP/RESET** until **SET** appears. The second digits flash.
3. Press **START/STOP** to reset the second digits to **00**.
4. Press **MODE**. The minute digits flash.

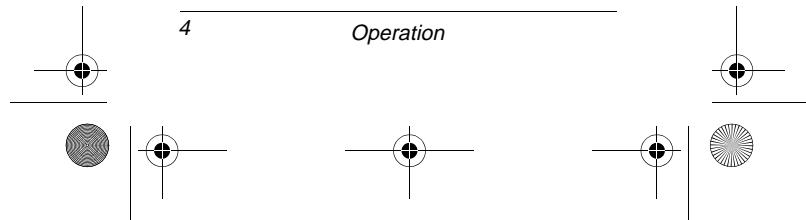


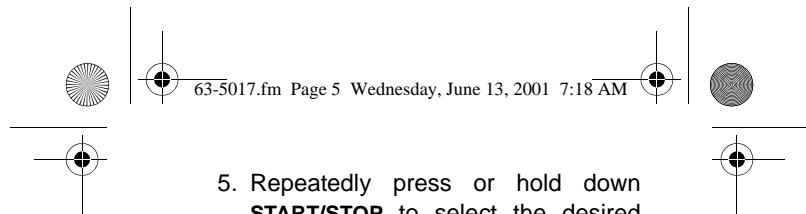


5. Repeatedly press or hold down **START/STOP** to select the desired minutes.

6. Press **MODE**. The hour digits flash.


7. Repeatedly press or hold down **START/STOP** to select the desired hour.

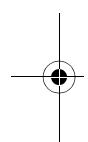

**Note:** Be sure to select an AM or PM hour if the stopwatch is set to the 12-hour time display format. **PM** appears at the top left of the display when PM is selected.

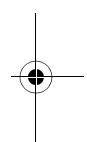


8. Repeat Steps 6–7 to set the desired date, month, day of the week, 12- or 24-hour format, and date display format.

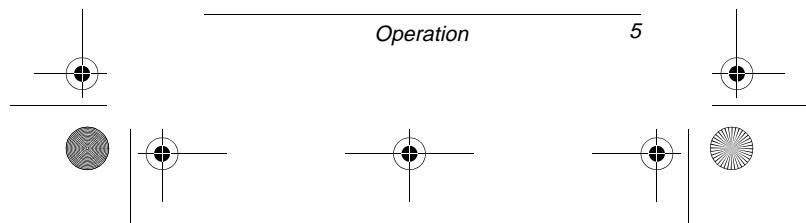


**Notes:**

- When setting the date, you can select the date to appear in either the M-D (month-date) or D-M (date-month) format.
- There are always 29 days displayed for the month of February. If there are only 28 days in February for the current year, you must manually change the date from **29** (February 29) to **3 1** (March 1).
- If you need to set a date later than the last day of the displayed month (for example, if you want to set the date to August 31 and the month is set to **6** for June), you must set the current month first, then the day.

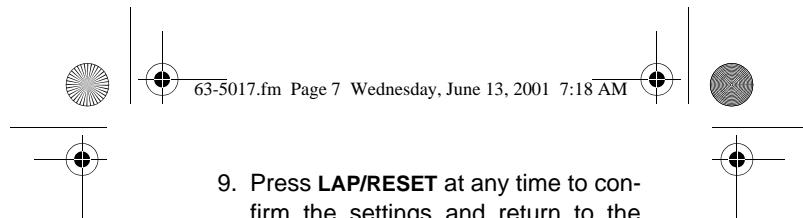


9. Press **LAP/RESET** at any time to confirm the settings and return to the time display.


The stopwatch automatically displays the time. When you are using the daily alarm, the time reappears if no button is pressed for about 2 minutes.

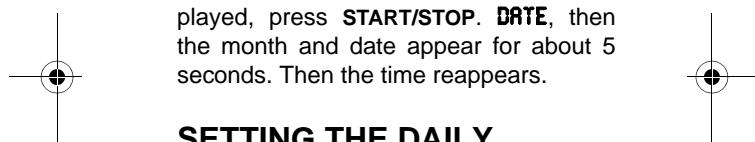

## SETTING THE DAILY ALARM TIME

1. Repeatedly press **MODE** until **ALM**, then the last set alarm time appears.
2. Hold down **LAP/RESET** until **SET** appears. The minute digits flash.

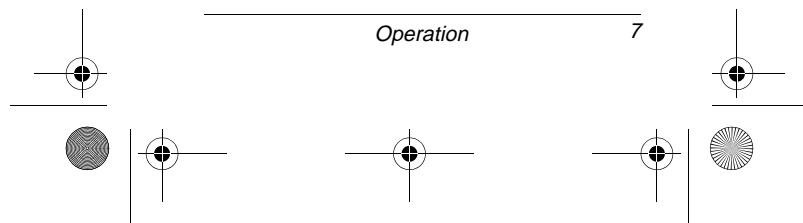


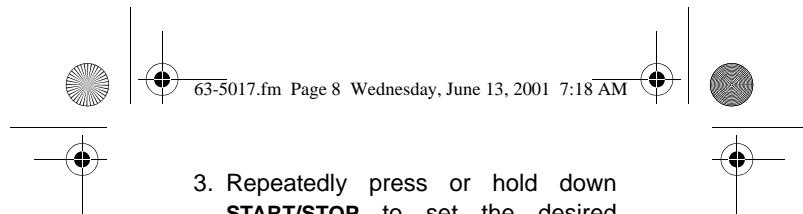

3. Repeatedly press or hold down **START/STOP** to set the desired minute, then press **MODE**. The hour digits flash.
4. Repeatedly press or hold down **START/STOP** to set the desired hour.

**Note:** Be sure to select an AM or PM hour if the stopwatch is set to the 12-hour time display format. **PM** appears at the top left of the display when PM is selected.

5. Press **LAP/RESET** to store the setting.
6. To return to the time display, repeatedly press **MODE**, or wait about 2 minutes.

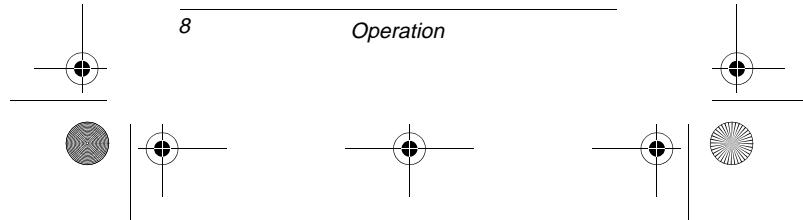



63-5017.fm Page 9 Wednesday, June 13, 2001 7:18 AM




To check the set alarm time, repeatedly press **MODE** until **ALM**, then the set alarm time appears.



## TURNING THE DAILY/HOURLY ALARM ON/OFF

1. Press **MODE** until **ALM**, then the set alarm time appears.
2. Repeatedly press **START/STOP** to turn the alarms on or off.
  - appears when the alarm is turned on.
  - appears when the hourly chime is turned on.


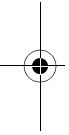


At the set alarm time, the stopwatch beeps for 20 seconds. Press any button except **LIGHT** to silence the alarm sooner.



*Operation*

9

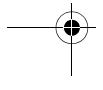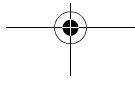




63-5017.fm Page 10 Wednesday, June 13, 2001 7:18 AM




When the hourly chime is turned on, the stopwatch sounds two beeps at the beginning of each hour.




## USING THE STOPWATCH

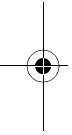

1. From the time display, press **MODE** twice to view the stopwatch display. **STW** then the last reading of the stopwatch appear.
2. Press **LAP/RESET** to reset the counter to **00:00**. The stopwatch beeps.  
If you do not reset the counter, the stopwatch continues timing from the last reading.
3. Press **START/STOP** to start timing. The stopwatch beeps and **STW** appears at the top left of the display

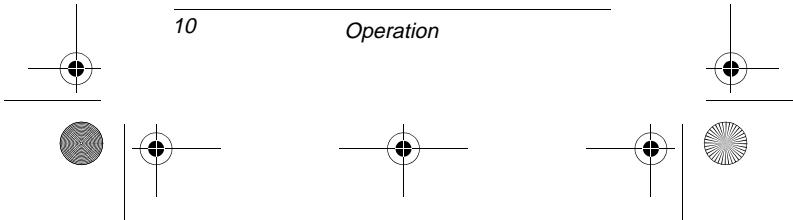

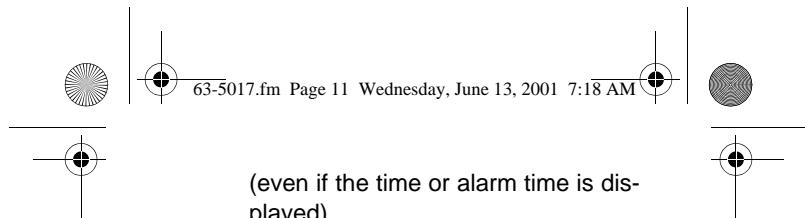

(even if the time or alarm time is displayed).


When the stopwatch reaches 59 minutes, 59.99 seconds, it restarts from zero.

- To stop timing, press **START/STOP**.  
**STW** disappears.

## Lap Timer

The stopwatch is equipped with a split function for you to keep track of individual accumulated time.

1. While the stopwatch is running, press **LAP/RESET** to check the accumulated time at that instant. The stopwatch beeps and **SPLIT** appears below **STW**, at the top left of the display. The timer continues running.

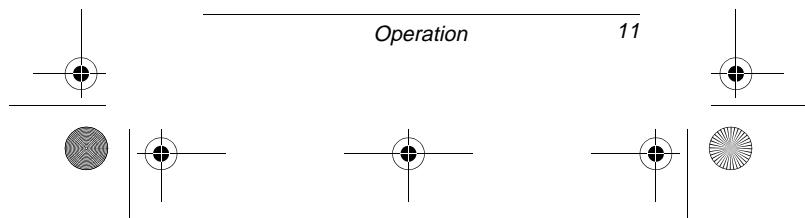



63-5017.fm Page 12 Wednesday, June 13, 2001 7:18 AM



2. Press **LAP/RESET** again to return to the actively running view. The stopwatch beeps and **SPLIT** disappears.



**Note:** If you press **START/STOP** while **SPLIT** appears, the timer stops and the total accumulated time appears.



## **Care**



Use and store the stopwatch only in normal temperature environments. Handle the stopwatch carefully; do not drop it. Keep the stopwatch away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the stopwatch's internal components can cause a malfunction and might invalidate its war-



12

*Care*



—  
|  
—

—  
|  
—

—  
|  
—



rancy. If your stopwatch is not performing as it should, take it to your local RadioShack store for assistance.

## INSTALLING THE BATTERY

Your stopwatch requires one CR2032 3-volt lithium button-cell battery (supplied) for power. For the best performance and longest life, we recommend a RadioShack battery.

**Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.

**Caution:** Use only a fresh battery of the required size and recommended type.

**Note:** Removing the battery automatically clears all settings.

1. With a Phillips screwdriver, remove the screws from the back of the stopwatch, then lift off the back.
2. Remove the screws on each side of the metal plate and lift it off.
3. Replace the old battery with a new battery, positive (+) side up.
4. Replace the metal plate and secure it with the screws.
5. Press the **RESET** pad to reset the stopwatch. All the display characters appear on the display for about 2 seconds. **TIME**, then **12:00** appears.

**Note:** After replacing the battery, you must reset the stopwatch to resume operation.

6. Replace the back of the stopwatch  
and secure it with the screws.

7. Re-enter the correct time, date,  
month, and day of week.

When the stopwatch stops operating  
properly or the display dims, replace the  
battery.

**Warning:** Keep button-cell batteries  
away from children. Swallowing a button-  
cell battery can be fatal.

**Limited One-Year Warranty**

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstatement.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.  
RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102  
*We Service What We Sell*

12/99

RadioShack Corporation  
Fort Worth, Texas 76102

63-5017  
06A01  
Printed in China